

OZZ SQR 7"

88114 (black)

88115 (white)

Before installation

1. Check the local laws and regulations and the region your vehicle may travel to for Auxiliary light before installation, ensure they are compliance.
2. Read all installation instructions.
3. Make sure the dimension and weight of the lamps and device are matched to your vehicle. See figure O1.
4. Slight moisture inside may occur, it will be removed out from the vent after 2-4 time working.
5. Working Voltage: 9-32V DC.

Mounting

1. Place the nut on the bolt and hand-tighten it to hold the light in place. Use a wrench to fully tighten the nut, ensuring the light is securely mounted.

Please note: Do not use the product if the lamp housing or lens is damaged upon removal from the packaging. Ensure the power is turned off during installation. The warranty is void if the product is mounted upside down or if the DT-connector is cutted.

Wiring connections & Functions

1. Wiring connections

Black: Ground,-
Red: Driving light for Off road, +
Brown: Driving light on road, E-marked Mode, +
White: White position light, +
Yellow: Amber position light, +
Blue: R65 function, +
Green: Warning pattern switch and synchronization, +

When connecting, there are two modes to choose from: Boost mode and E-marked mode.

Boost Mode:

Connect the red cable to the vehicles positive terminal (pre-prepared connection in the DT contact).

E-marked Mode:

Connect the brown cable to the vehicles positive terminal.

Switching Between Modes:

To switch between Boost and E-marked modes, connect a separate switch with both the red and brown cables.

Note: The lamp is pre-configured for Boost mode. If you want to use the E-marked mode, you need to connect the brown cable instead of the red one. If both the red and brown cables are connected to the vehicles positive terminal, Boost mode will override.

2. Wiring Harness, 40A relay, 30A fuse.

Please note: Do not use the product if the lamp housing or

Figure O1

