

# OZZ SQR 3"

88118 (black)

88119 (white)

## Before installation

1. Check the local laws and regulations and the region your vehicle may travel to for Auxiliary light before installation, ensure they are compliance.
2. Read all installation instructions.
3. Make sure the dimension and weight of the lamps and device are matched to your vehicle. See figure O1.
4. Slight moisture inside may occur, it will be removed out from the vent after 2-4 time working.
5. Working Voltage: 9-32V DC.

## Mounting

1. Place the nut on the bolt and hand-tighten it to hold the light in place. Use a wrench to fully tighten the nut, ensuring the light is securely mounted.

## Wiring connections & Functions

- Black: Ground,-
- Red: Positive, +
- White: White position light, +
- Yellow: Amber position light, +

**Please note:** Do not use the product if the lamp housing or lens is damaged upon removal from the packaging. Ensure the power is turned off during installation. The warranty is void if the product is mounted upside down or if the DT-connector is cutted.

**Figure O1**

