

# OZZ XH1

88301

## Preliminary steps

1. Read all instructions carefully and study diagrams before installing lights.
2. Check with state and local authorities for laws governing usage and proper mounting of auxiliary lamps.
3. Disconnect ground connection from battery (marked "-") to avoid accidental short circuits before attempting to connect electrical wires.
4. Route new wires along existing wiring. Tape as necessary to correct slack.
5. When running wires through the firewall, keep them away from moving parts.

## Mounting

1. Assembly of the indicator: Remove the plastic cover from the main light and install the parts of the indicator on the main light. Please note the distinction between the left and right indicator.
2. Drill 10.5 mm holes for screw placement on the surface where you would like to fix the light.
3. Use the bolt to fasten the lamp, add the locking washer and tighten the bolt.

## Wiring Requirements

Black: "-" (Ground wire)  
 Red: "+" (High beam & Heating function)  
 Yellow: "+" (Low beam & Heating function)  
 Blue: "+" (Park light/amber colour & Heating function)  
 Gray: "+" (Park light/white colour & Heating function)  
 Green: "+" (Indicator)

## Warnings

1. Work under the specified voltage (DC9-36V).
2. This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.

3. Keep heat-sink clean and exposed to maintain air flow.
4. The heating function will be activated automatically when the light is on.
5. When the temperature of the front cover reaches approx. 50 °C, the heating function is turned off automatically.

