


# Led Road Flares Manual

## Warning

1. Read all instructions before operating.
2. Do not look directly at the light. It may cause injury to your eyes.
3. Turn off all lights before charging.
4. Do not use alcohol, flammable solutions, or other solvents on or near this unit.  
Only clean with warm water and a soft cloth.
5. Administer close supervision when using around children.
6. Waterproof only when used in accordance with manufacturer's instructions.

## Parts Identification

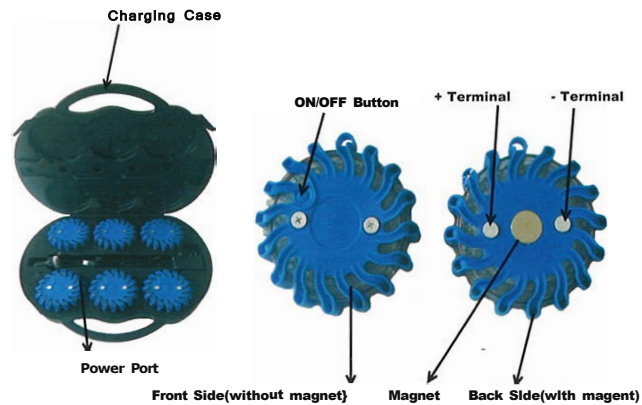

## Charging

1. Put flares into charging case with front side facing up. The (+) and (-) terminal symbols will be aligned.
2. Plug 12V/24V car charger or 110V/220V wall charger into power port of charging case.
3. Connect to power supply, the indicator light beside flares will light up as below.

Charging: The indicator light beside flares turns RED and make a Green/Red alternating flash.

Fully Charged: The indicator light beside flares stop flash and keep steady after 8 to 10 hours.

Note:

If indicator light turns red, not flashing, it means flares is placed incorrectly and can not be charged.

If so, move flare left or right, up or down and the indicator light will flash and flares start to charge.