


TX-SL009D Wireless remote control for Dashboard




 
Instruction

OVERVIEW:

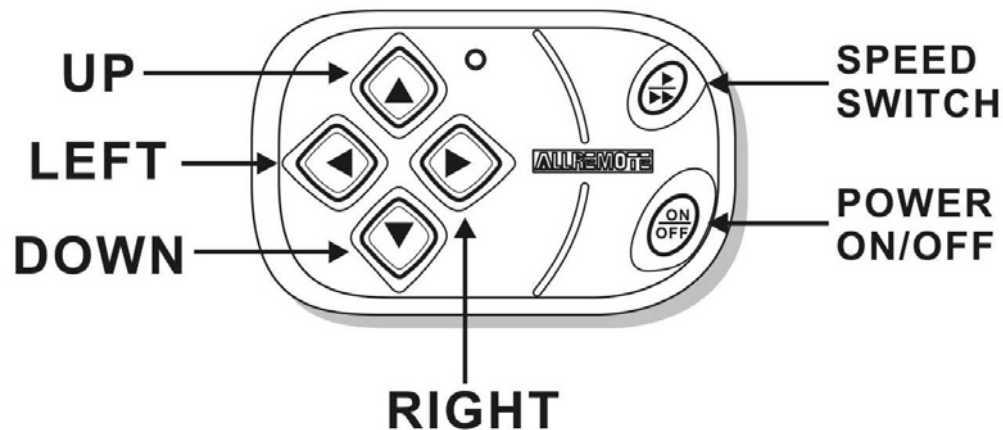


REMOTE DUPLICATION:

-----**Make sure the connector to be connected (plug in), Not switch on**


1. Turn off power then plug in the connector. Turn on power and press still both  (up) and  (down) button at the same time on the first remote **within five seconds**. If the light flashes once shortly, means the code learning completed.
2. For the second remote as spare, you have to press still both  (up) and  (down) button simultaneously on the second remote within two seconds right after finish duplicating the first one. If the light flashes twice, means the code learning completes for the second remote.
3. If duplicated failed, please repeat (1). And to make sure the disconnect to be connected (plug in).

INSTALLATION:

1. OPEN UP

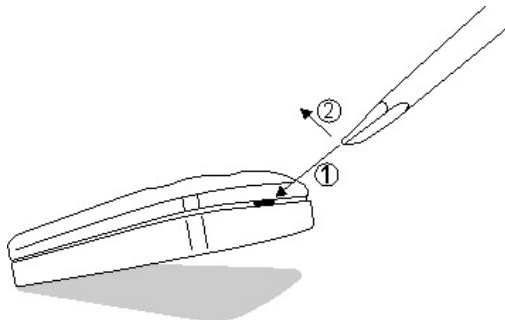

2. SCREW the TX-SL009D on the Dashboard

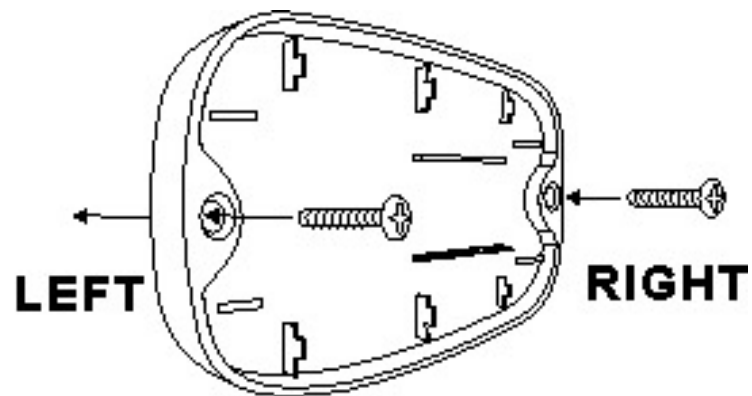

Length Unit: mm

