



## Wire Connections

Black Positive Wire (About 35 Inch), connect it to the circuit board and the other end to the battery negative post

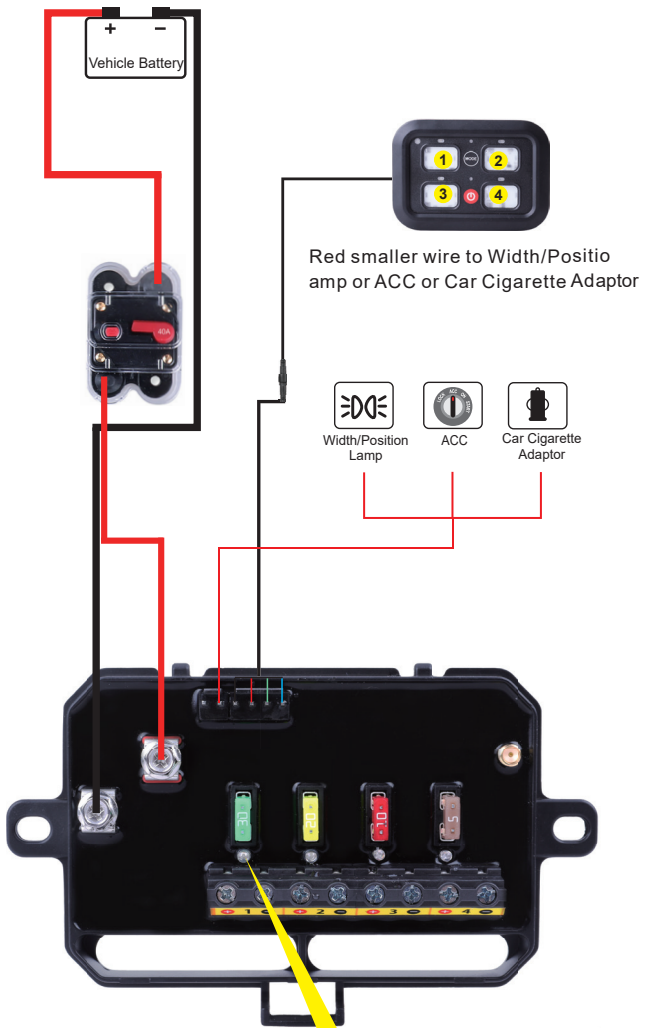

Fuse Indicator Light: When the LED light is red, the fuse is bad. Replace it with the back-up auto fuse comes from the package; if problem hasn't been solved, let's get contact with the seller

## Switch Panel Indication

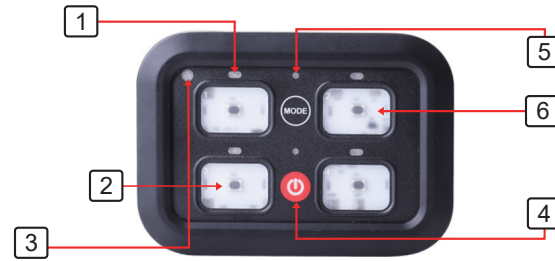

- 1 - Indicator lights up to show the circuit is powered on.
- 2 - Area for DIY placement of the selected label.
- 3 - Position of the integrated sensor circuit.
- 4 - Master ON/OFF button, press it power on or off all circuits.
- 5 - Indicator lights up when you press the Master ON/OFF button.
- 6 - RGB backlit on when the switch panel is powered on. By default, it's green.

## Backlit Color & Brightness

By default, the backlit is in green color, the brightness of the backlit is automatically dimmable according to the brightness variation of the surrounding environment. The darker the surrounding is, the darker the backlit will be; the brighter the surrounding is, the brighter the backlit will be.



To change the backlit color, please check below steps:

Press MODE and any other key in the same time, the indicator of MODE turns red. Click or hold the 1/4 button until the back-lit turns to the color you want, then click MODE and your setting will be saved (If the setting is not saved within 20 seconds, all changes will be ignored). Holding the 1/4 button will make the color change faster.

Press and hold it for 10 seconds, restore to factory settings: green back-lit, on/off switches.

## Switch Panel Advanced Option

Accessory circuit 1~4 of the switch panel can be operated as Toggle or Momentary or Pulsed Mode. By default the switch panel comes out of the box set for Toggle Mode. To enable or disable these three modes, please follow these procedure.

Double click the MODE, all indicators will blink, then choose and click the button until its indicator shows the mode you want: Toggle (indicator red), Momentary(indicator blue), Pulse(indicator green), click the MODE again and your settings will be saved(If the setting is not saved within 12 seconds, all changes will be ignored).



This switch panel control system has eight switch circuits, each has a maximum current rating. The total operating amperage of the connected accessories can not exceed 40 amps (480 watts). You may have multiple electrical devices or auxiliary LED lights connected that total more than 40 amps, but you can not have them turned on at the same time. Otherwise, the control box will be damaged. The switch panel comes configured with the following fuses:

Circuit 1	Circuit 2	Circuit 3	Circuit 4
30A	20A	10A	5A



# RGB Programmable 4 Switch Panel System

- RGB Color backlit
- Toggle / Momentary / Pulsed modes
- Universal application



Prior to installation, connect the switch panel system to a 12V DC power source and test for full functionality.

What's Included

**A** Circuit Control Box



**B** Switch Panel



**C** Power Harness, Connections



**D** 3 × Mounting Brackets



**E** 60 × Labels ( Decals )



Product Features

- Universal mounting brackets
- Controls up to 4 LED lights or other electronic devices
- 4 Control box back-up fuses
- RGB Color changeable LED backlight
- Dimmable backlighting capabilities
- Red / Green / Blue LED indicator lights
- 60 Switch labels
- Input Voltage: 12V - 24V DC
- Max. Output Power: 480 Watts@12V, 960 Watts@24V
- Max. Input Current: 40 Amps
- Switch Panel Modes: Toggle, Momentary, Pulsed
- Integrated LVCO (Low-Voltage Cut-Off)
- Includes wiring harness and hardware

Control Box Installation

There are TWO different mounting options provided to mount the control box, including:

- Fix mount bracket
- Flush mount

The ideal mounting of the control box should allow for an unobstructed path for the power wires, accessory wires and the control harnesses included.

If you decide to drill, please check the clearance behind the drilling location. Make sure you are not going to drill through and damage any wiring harness and components of the vehicle.


Option 1: Fix Mount

Using the mounting bracket as a guide, find a good and desired location to mount the control box.



Option 2: Flush Mount

Using the control box as a guide, find a good and desired location to mount.

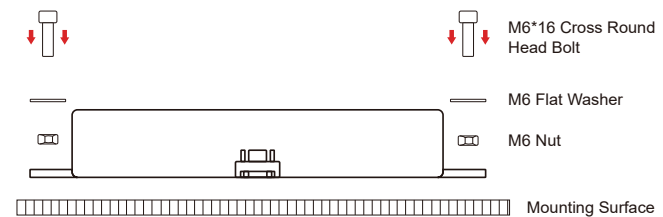

Switch Panel Mounting


There are two different mounting options provided within the box, adjustable mount bracket and fix mount bracket. If user hopes to get a flexible and adjustable angle of the switch panel, check and follow steps as below.

Option 1: Adjustable Mount Bracket

- The ideal thickness of the mounting surface should be between 1/8" to 1/4".
- Check to make sure the control wire and extension plug & play wire is long enough to mount the desired location.
- Check the clearance behind the drilling location. Make sure you are not going to drill through and damaged any wires and components of the vehicle.
- Once you decide where to mount, use the bracket to mark the drill location.
- After the installation of the panel, proceed to the wiring installation.

1. Screw in the Cross Round Head Screws as shown.

4PCS M3\*6 Cross Round Head Screws

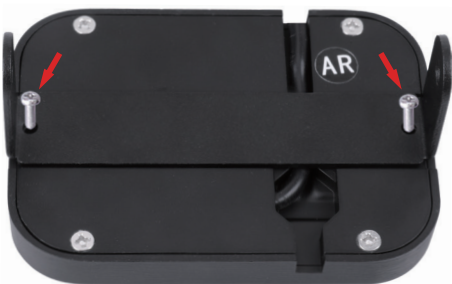

2. In order to get needed mounting angle, use the Allen Wrench to loosen or fasten the bolts.



3. All the screws listed below can be used to tighten up the bracket, user can choose either the screw size you need base on the thickness between the bracket and the mounting surface. Keep the rest screws for back-up purpose.

